

FITTING INSTRUCTIONS

- 1. From back of unit mark top reinforced bracket.
- Drill 6mm through top bracket
- Set unit at desired height
- 4. Support unit at desired height and mark top and bottom fixing positions through drilled holes.
- Drill all holes for suitable fixings.
- Screw basin stud into lower fixing plug.

- 7. Loosely fix unit onto bottom fixings. Fig 1
- 8. Loosely fit top fixings including cover cap.
- 9. Set unit straight using a spirit level.
- 10. Tighten all fixings enough to secure the unit.
- 11. Fix waste pipes through a conventional trap. Fig 5
- 12. Seal all edges and joints between units with standard silicone. Fig 3

RECOMMENDED FIXINGS

Supplied by others

Fig 2. Top Fixing Suitable wall plug, screw and cap

Fig 4. Bottom Fixing Suitable wall plug, 6mm basin bracket.

SNNQUIP

2 STALL **FLOOR URINAL**












01723 512224

Fig. 1

Fig. 2



Fig. 5

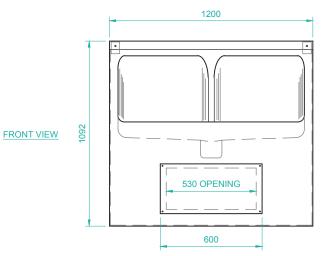

STEEL REINFORCED CORNER FOR FIXING (SITE

FLUSH FITTING GRP ACCESS DOOR SECURED WITH 4 OFF M6 STAINLESS STEEL DOME HEAD SECURITY SCREWS

